DIMAC

A-A Series Long Sprint NC Roll Feeding Machine

for high speed stamping presses

MODEL **A40A**/**A60A**



A40A







491C Controller



- Automatic Acceleration Setting System
- Automatic Thickness Adjustment System
- Air Free
- Electromagnetic Roll Pressure System

Input Items

- Feed Length (mm/Inch)
- Roll Pressure (%)
- Press Shot Speed (SPM)
- Feed Start Angles · Overrun Check Angles
- Release Start Angles · Release Finish Angles

Product Specifications

Specifications	A40A	A60A	
Material Width	120mm* ~ 400mm		
Max. Material Thickness	~ 1.6mm		
Max. Material Weight	~ 10kg		
Max. Stamp Speed	~ 600spm		
Max. Feed Length	999.99mm (0.01mm) 999.	99mm (Adjusted by 0.01mm unit)	
Required Power Supply	(±10%) · 50/60Hz	3-phase 200V(±10%) · 50/60Hz	

Optional feed rolls are available for minimum material widths of 120/150 or less.

Feed Performance Table

Feed Angle 150°					
Press Speed	Max. Feed Length [mm]				
spm	Material Weight				
	3kg	5kg	7kg		
600	17.4	10.9	5.7		
550	23.5	14.6	7.7		
500	31.9	19.9	10.5		
450	44.0	27.4	14.5		
400	61.8	38.5	20.4		
350	89.1	55.6	29.4		
300	133.2	83.1	44.0		
250	209.8	131.0	69.3		
200	334.7	223.1	118.0		
150	542.9	422.5	227.9		
100	959.3	838.9	555.0		

Feed Angle 180°				
Press Speed	Max. Feed Length [mm]			
	Material Weight			
spm				
	3kg	5kg	7kg	
600	31.9	19.9	10.5	
550	41.7	26.0	13.7	
500	55.0	34.3	18.1	
450	73.9	46.1	24.4	
400	101.4	63.3	33.5	
350	143.1	89.3	47.2	
300	209.8	131.0	69.3	
250	309.7	202.7	107.2	
200	459.6	339.2	179.6	
150	709.5	589.1	341.5	
100	999.9**	999.9**	803.8	

Feed Angle 210°				
Press Speed	Max. Feed Length		[mm]	
spm	Material Weight			
	3kg	5kg	7kg	
600	50.8*	31.7*	16.7*	
550	64.7*	40.5*	21.4*	
500	82.6	52.6	27.8	
450	107.3	69.6	36.8	
400	142.7	94.1	49.8	
350	195.6	131.0	69.3	
300	278.8	189.7	100.3	
250	409.7	290.0	153.4	
200	584.5	464.2	254.1	
150	876.0	755.6	478.1	
100	999.9**	999.9**	999.9**	

It may not be possible to finish workpiece feed at angle as specified on the feed performance table if the feeding machine is under a load resulting from material stress, etc.

■ Precautionary Remarks on Installation

- For the product details and installation conditions, refer to the specifications of separate sheet.
- $\boldsymbol{\cdot}$ Notations on control panel are in English and signs only.
- When this machine is exported, make sure that the machine is provided with safeguards required in the destination country.

Example : The electric power supply to this machine is 3-phase 200V \pm 10% \cdot 50/60Hz only. Not available option which suited the local power supply.

- · It's necessary that the exclusive use rotation sensor is installed.
- Specifications in this catalog are subject to change for machine improvements without prior notice.
- $\boldsymbol{\cdot}$ Before using the machine, read the safety instruction in the instruction manual.

VENDAR via E. Mattei 58 35020 Sant'Angelo di Piove (PD) P.iva IT05512270280